



- (A) CRANK CASE VENTILATION
- (B) UNIVERSAL BRACKET
- (C) NEW PLACEMENT FOR ALTERNATOR

SCALE 1:5
 THIS DRAWING SPECIFIES THE "SOLAS" INTERFACE.
 OTHER ENGINE DIMENSIONS SEE THE TYPE DRAWING.

<small> In order to ensure the correct use of the engine, the user must read the instructions carefully and follow them. The engine is not to be used for any purpose other than that for which it was designed. The user must read the instructions carefully and follow them. The engine is not to be used for any purpose other than that for which it was designed. </small>	<small>SYMBOLS, DIMENSIONS AND OTHER INFORMATION REFER TO THE TYPE DRAWING AND THE USER MANUAL.</small>	
	ENGINE DIMENSIONS SOLAS D4/06	
VOLVO PENTA	<small>EXPOSITION DRAWING</small>	
35521518	03	11

35521518-03-3аружені с www.volvo-penta.com 26-06-2014 6:23:15