



- (A) CRANK CASE VENTILATION
- (B) UNIVERSAL BRACKET
- (C) NEW PLACEMENT FOR ALTERNATOR

SCALE 1:5  
 THIS DRAWING SPECIFIES THE "SOLAS" INTERFACE.  
 OTHER ENGINE DIMENSIONS SEE THE TYPE DRAWING.

<small>           In order to ensure the correct use of the engine, the user must refer to the Volvo Penta manual. The engine is not to be used for any other purpose than that for which it was designed.         </small>	<small>SYMBOLS, DIMENSIONS AND GENERAL DIMENSIONS IN THIS DRAWING ARE IN MILLIMETERS</small>	
	<b>ENGINE DIMENSIONS</b> SOLAS D4/06	
<b>VOLVO PENTA</b>	EXPOSITION DRAWING <small>See Engineering File</small>	35521518
03	11	11

35521518-03 - Зарпужені с www.volvopenta.com 26.06.2014 6:27:58